- 1. **Steps =**> Open Website and enter login and passwords
- 2. **Steps =**> Download SVG viewer and save and run it.
- 3. **Steps=>** Closed internet explorer and re-open and relogin and enter passwords

							– 🗇 🗡
Http://125.23.230.146/modules/download/	、 ク + C 🥝 scada	遵 report	遵 scada	🥌 download 🛛 🗙	MSN India   Hotm	Buy Laptops, Netb	6 2 2
scada	alarm rt	data curve	event	report	system	download	Exit 🔨
	SVG Viewer	Adobe SVG Vi	ewer 3.0				
							~
📕 🚞 🧟 download - Intern 👩 http:	:://mail.goog 🔿 🔽	🟦 🕅 DFE-RA	NJ 🗰 Do	cument1 - Mic	( 🥵	🔺 Ӓ 🥫 🗍 atl 🐚	16:18
							01-09-2015

## 4. Steps=>Open internet setting



5. Steps=>Go to Sites, add and set level low, save and closed

Internet Options ? ×		_		- 0 ×
General Security Privacy Content Connections Programs Advanced	arm rtdata	etterve ever	it report system	Buy Laptops, Netbooks, UF 22 ** Tools (Alt+X)
Select a zone to view or change security settings.	Tr You can add and remo this zone will use the :	usted sites	ation 33%V Hat. (Not Working)	D LEGENDS OPEN STATUS CLESE STATUS ERROR STATUS ERROR STATUS
Trusted sites This zone contrains websites that you trust not to damage your computer or your files. You hove websites in this zone.	Add this website to the zone:	Add	Isolator 1	ator-2 Signal List Gard Status
Security level for this zone Allowed levels for this zone: All - Low - Minute lasfepuards and warning prompts are provided - Minute to solvehoaded and run without prompts - All content is downloaded and run without prompts - Appropriate for sites that you absolutely trust - Enable Protected Mode (requires restarting Internet Explorer) - Custom level Default level	http://125.23.230.146	(https:) for all sites in this zone	Total and the second se	ेते alaxive In Area Law Alaxiv Alaxi
Reset all zones to default level       OK     Cancel	27.80Amp 85.18Amp 1203.204W 1203.204W 1403W 1403W 1403W 11.03W	Isolator 400/5 11kV Muin-2 L 1kV Bus Coupler Isolator-1 Isolator-1 Isolator	TY BE CANNY TY BE CANNY BE CANNY BE CANNY TY BE CANNY BE CANNY TY BE CANNY BE CANNY TY BE CANNY TY TY BE CANNY TY TY BE CANNY TY TY BE CA	8
Isolator- 200.6 L Dolator- Tre dolator Isolator- Tre dolator Isolator- Tre dolator Isolator- Tre dolator Isolator- Isolator Isolator- Isolator- Isolator- Isolator- Isolat	200/5 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Isolator-1 2006 () k() Isolator-2	<ul> <li>A state of the sta</li></ul>	Weil Isolator-1
Isolatar-3 11W Satagunu Scada - Internet E On https://mail.goog	Isolator-3 11kV Chandrawardai Nagar	I 11kV Ajay Naga M DFE-RAJ	solator-3 r 11kV Prithivi Raj Documenti - Mic	16-16 16-16 01-09-2015

## 6. **Steps=**>Open compatibility view setting



7. Steps=>Add 125.16.245.182 and close

					- 8 ×
(	,	遵 report	遵 scada	× 🚺 MSN India   Hotmail, O 🛄 Buy Lapt	ops, Netbooks, 🕅 🛱 😫
scada	alarm rtdata	CHLAG	event	report system	download Exit
RTU COMA RUN RTU REMOTE LAMY BELY	33/11kV C Compatibility View Set	Chandravardai tings ×	Nagar Substatio	Ω 33kV Hat. Not Working) ₩	CLOSE STATUS
47.5 Sub-Station DC Voltage 33kV Bus-1 Taolat	Change Compatibility View Settings		Isolator-1	Isolator-1 Isolator-2	Signal List 😓
120)	Add this website:	Add	Isolator-2 120/5	240/5 t 51.77Amp % 51.44Amp % 51.44Amp % 51.54Amp % 51.44Amp % 51.54Amp % 51.54Amp	Card Status
30kV Res-2	Websites you've added to Compatibility View: 125.23.230.146	Remove	3kV Main-2 Isolator-3 Isolator-3 Isolator-3	Hz Hz KV Isolator-3 V 1 33.27kV V 33.27kV V 33.27kV V 33.27kV	5) B) <
5 MVA 83/3 MV 17/7-1 Company : Danis			A LIKV T/F-2 pany : RIMA		<u>ନ</u>
1	<ul> <li>✓ Display intranet sites in Compatibility View</li> <li>✓ Use Microsoft compatibility lists</li> </ul>		Isolator- Isolator-2 400/5	™ 85 654mp № 85 224mp ₩ 85 324Wy	
11kV Mui	Learn more by reading the <u>Internet Explorer</u>	privacy statement	11kV Main-2 L	Win-         440,001kVAr           PF         0.91           #Z         48,83Hz           Ym         63,44kV           Ym         10,34kV	
Isolator		Close	Isolator-1	ISAmp 2Ampsolator-	r-1
200/5 1 766 2004 200/5 2 766 2004 1 2 49.334 2004 1 2 10.564 1	200/5 4451 200/5 467 1solator-4 1 L 495 Isolator-4 1 L 495 Isolator-4 1 L 495 V 105	36Amp 20kW 80kVAr 33Hz MkV 77kV	200/5 475. L L Isolntor-2 - 4 - 5 - 5 - 5 - 5 - 5 - 5 - 5 - 5 - 5	6 And 200/7 200/7 1708 COUNTY 200/4 200/7 100/100/	
11kV Bus-2	Isolator-3		Isolator-3	Isolator-3	ar.
11kV Sataguru	11kV Chandravardai Nagar		11kV Ajay Nagar	11kV Prithivi Raj	<b>1617</b>

8. **Steps=**>Re-open we client and see all view and download reports etc.